

Nikon Cameras

	D5	D4s	D4	D3x	D3s	D3	D2Xs	D2Hs	D2H	D1	Df	D810	D800E	D800	D750	D700	D610	D600	D500	D300s	D300	D200	D100	D7500 New	D7200	D7100	D7000	D5600 New	D5500	D5300	D5200	D5100	D5000	D3400	D3300	D3200	D3100	D3000	D90	D80	D70 / D70s	D60	D50	D40 / D40X	Coolpix A	Coolpix P7700	Coolpix P5100	Coolpix P5000			
Air 1 Commander	● ^{*1}	● ^{*2}	● ^{*2}	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○			
Di700 A	●	●	●	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○
i60A	●	●	●	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	
i40	●	●	●	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	
MF18	●	●	●	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○			
MG8000 Extreme	●	●	●	●	●	●	○	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	○	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○		
Di866 Mark II	●	●	●	●	●	●	●	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○			
Di700	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○			
Di600	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		

- Compatible Model
- Incompatible Model
- No information available. To be confirmed.

*1 Extremely underexposure (about -2EV) appear when Air 1 mounted on D5 to control wirelessly the slave flash and the flash light does not hit the subject directly, such as bouncing or diffusing.
 *2 In D4 - D4s, when manual flash is set, when you shoot continuously and rapidly manually in the Q mode - 1 sheet shooting mode, emission may be missing. Please understand that it is based on specifications.
 *3 At the time of FP flash, it may be underexposed by about 1 stage compared with the genuine strobe
 *4 SD Mode not supported

	Nissin Flashes								Nikon Flashes							
	i40 Nikon	Di466 Nikon	Di600 Nikon	Di622 Nikon	Di622 Mark II Nikon	Di700 Nikon	Di866 Nikon	Di866 Mark II Nikon	MG8000 Nikon	SB-500	SB-600	SB-700	SB-800	SB-900	SB-910	SB-5000 New
Air R Receiver Nikon	●	●	●	● ^{*5}	● ^{*5}	●	●	●	●	●	●	●	●	●	●	●

- Compatible Model
 - Air R's GN Mode. 25-49
 - Air R's GN Mode. 50-65
- *5 FP/HSS high speed sync function not supported

Olympus Micro Four Thirds / Four Thirds Cameras

	E-M1 Mark II (OMD) New	E-M1 (OMD)	E-M5 Mark II (OMD)	E-M5 (OMD)	E-M10 Mark II (OMD)	E-M10 (OMD)	PEN-F	E-P5	E-P3	E-P2	E-P1	E-PL7	E-PL6	E-PL5	E-PL3	E-PL2	E-PL1	E-PM2	E-PM1	E-620	E-520	E-500	E-410	E-30	
Nissin Model																									
Air 1 Commander (Four Thirds ver.)	●	●	●	●	●	●	● ^{*1}	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Di700 A (Four Thirds ver.)	●	●	○	●	●	●	● ^{*1}	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
i60A (Four Thirds ver.)	●	●	● ^{*1}	●	●	●	● ^{*1}	●	●	●	●	●	●	●	●	●	●	●	●	●	● ^{*2}	● ^{*2}	● ^{*2}	● ^{*2}	● ^{*2}
i40 (Four Thirds ver.)	● ^{*1}	●	● ^{*1}	●	●	●	● ^{*1}	●	●	●	●	●	●	●	●	●	●	●	●	●	● ^{*2}	● ^{*2}	● ^{*2}	● ^{*2}	● ^{*2}
Di466 (Four Thirds ver.)	—	●	○	●	○	●	○	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●

- Compatible Model
- Incompatible Model
- No information available. To be confirmed.

*1 Unstable operation may appear when turn on the S-OVF Function (Optical view finder simulation) of EVF and shoot with EVF.
 *2 Flash's optical slave wireless mode is incompatible with camera's wireless flash system.

Panasonic Micro Four Thirds Cameras *3

	GH5 New	GH4	GH3	GH2	GH1	GX8	GX7	GX7 Mark II / GX85 / GX80	GX1	G10	G8 / G80 / G85	G7 / G70	G6	G5	G3	G2	G1	GF2	GF1	LX100	LX7	LX5	LX3	FZ200	
Nissin Model																									
Air 1 Commander (Four Thirds ver.)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Di700 A (Four Thirds ver.)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
i60A (Four Thirds ver.)	●	—	●	●	●	●	●	●	●	●	—	●	●	●	●	●	●	●	●	●	●	●	●	●	●
i40 (Four Thirds ver.)	●	●	●	●	●	●	●	●	●	●	—	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Di466 (Four Thirds ver.)	—	●	●	●	●	○	●	○	●	●	—	○	●	●	●	●	●	●	●	●	●	●	●	●	●

- Compatible Model
- Incompatible Model
- No information available. To be confirmed.

*3 According to the specifications of Panasonic Lumix series, the continuous shooting function cannot be used when an external flash is installed on the hot shoe.

Fujifilm Cameras																									
	GFX50s <small>New</small>	X-T2	X-T1 / X-T1 GS	X-T20 <small>New</small>	X-T10	X-Pro2	X-Pro1	X-E2S	X-E2	X-E1	X-M1	X-A2	X-A1	X100F <small>New</small>	X100T	X100S	X100	X70	X30	X20	X10	X-S1	HS50EXR	HS30EXR	HS20EXR
Nissin Model																									
Air 1 Commander	● *1	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
Di700 A	● *1	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
i60A	● *1	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
i40	● *1	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○

- Compatible Model
- Incompatible Model

■ The Fujifilm camera is supporting of High speed synchronize function after camera firmware updated

*1 Flash can be insert on the hot shoe of main body or that of EVF. When inserted a flash on the EVF shoe, do not tilt-up EVF since this may make the EVF damage.